



**ONTARIO WOOD TRUSS
FABRICATORS ASSOCIATION**

www.owtfa.com



Wood Trusses

**Strength, Economy,
Versatility**

Introduction

Wood trusses are engineered frames of lumber joined together in triangular shapes by galvanized steel connector plates, referred to commonly as truss plates.

Wood trusses are widely used in single- and multi-family residential, institutional, agricultural and commercial construction. Their high strength-to-weight ratios permit long spans, offering greater flexibility in floor plan layouts. They can be designed in almost any shape or size, restricted only by manufacturing capabilities, shipping limitations and handling considerations.

Metal plate connected roof trusses were first introduced into the North American market in the 1950's. Today, the majority of house roofs in Canada and the United States are framed



with wood trusses and increasingly, wood floor trusses are being used in residential and commercial applications.

Wood truss use is not limited to North America. They are gaining acceptance around the world and are widely used in Europe and Japan.



We've Come a Long Way

The first light frame trusses were built on site using nailed plywood gusset plates. These trusses offered acceptable spans but demanded considerable time to build.

In the 1950's the metal connector plate transformed the truss industry by allowing efficient prefabrication of short and long span trusses.

In North America the wood truss industry has grown to the point where more than 60% of residential roofs are now built with wood trusses. In Canada, approximately 95% of new houses are built with wood roof trusses.

When the advantages of wood trusses are considered, it is not surprising that their use is increasing throughout the world.

- **Strength:** Trusses provide a strong and efficient wood system specifically engineered for each application.



- **Economy:** Through efficient use of wood and by providing a system that is quickly installed in the field, wood trusses provide an economical framing solution.

- **Versatility:** Complex shapes and unusual designs are easily accommodated using wood trusses. The versatility of wood trusses makes it an excellent roof framing system in hybrid construction where wood trusses are commonly used with steel, concrete or masonry wall systems.

- **Environmental:** Wood, the only renewable building material, has numerous environmental advantages. Wood trusses enhance wood's environmental advantages by optimizing wood use for each specific application.

Improvements in materials, design and manufacturing technologies have increased wood truss competitiveness.

- **Research** has led to improved materials, design procedures and manufacturing technologies for wood trusses.

- **Truss** plates used to connect the wood pieces together have been optimized for strength and cost.

- **Lumber** manufacturing and grading technologies have evolved to allow more efficient use of the wood resource.

- **Computers** have been widely used to optimize truss design and make the manufacturing process more efficient.



Wood Truss Technology

There are a number of steps involved in the production and installation of a truss. A truss is designed for a specific application, manufactured in accordance with the truss design, delivered to the building site and safely installed in accordance with the design.


Truss Design

The truss design is initiated by the building designer who must specify; the shape and span of the truss, where the truss will be supported and what the loads on the truss will be.

Typically, the building designer or builder will contact the truss fabricator who will supply a fully engineered truss. The truss plate manufacturer usually designs the truss on behalf of the truss fabricator.

In North America, designs are based on the structural requirements of the Building Codes using design standards referenced in the Building Codes and approved material properties:

FIGURE 1: Truss Nomenclature and Common Truss Shapes

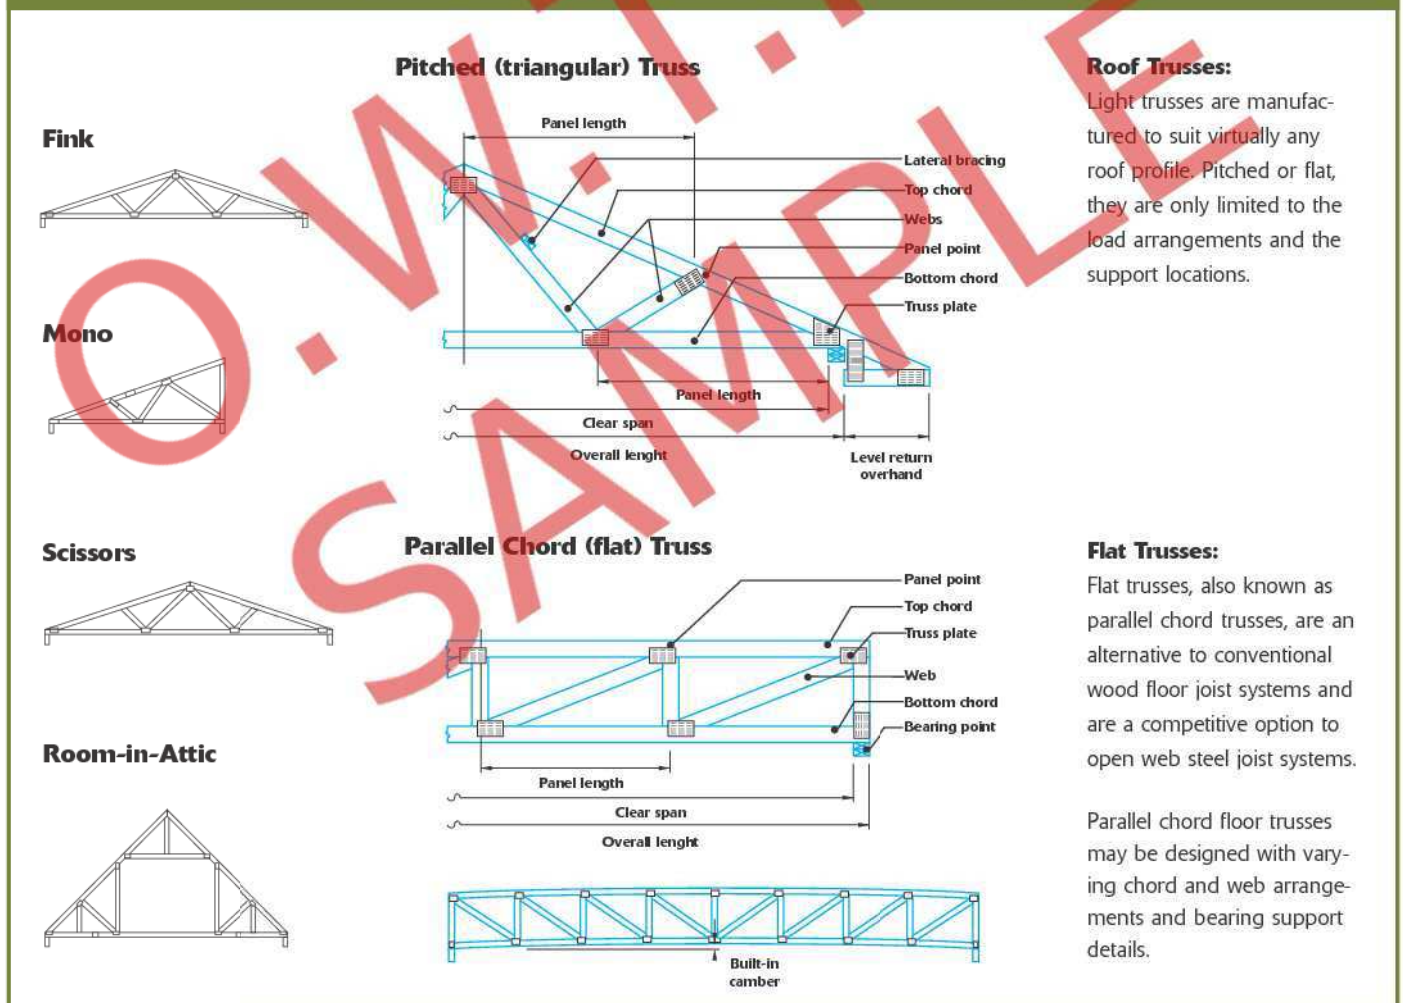

Structural analogues and methodology have been developed and standardized by the National Associations representing the manufacturers of the metal plate connectors.

Lumber design values are determined in accordance with the wood design standards.

Truss connector plates are proprietary and each plate has different structural properties. Design values for truss plates are developed through tests and analyses in accordance with referenced standards. Approval of the design values is overseen by National certification organizations.

Truss design is facilitated by the use of computer software that designs all truss members and connections and produces a design drawing with all the essential truss information. Included on the drawing (see Figure 2) is:

- The truss geometry,
- The loads used in the truss design,
- Species, size and grade of all wood members,
- Size and location of all connector plates,

- Truss bearing and uplift requirements, and
- Truss member bracing requirements.

Truss Materials

WOOD

All lumber used in trusses is graded using either a visual process or machine stress rating in accordance with national standards. In the visual grading process, each piece of lumber is visually examined and the wood grade is based on the size of growth characteristics that could affect the strength and stiffness of the member. Each piece of machine stress rated lumber undergoes a stiffness evaluation in addition to a visual evaluation.

The minimum size of lumber used is 38 x 89 mm for chords



Laboratory Testing of Wood Trusses

and 38 x 64 mm for webs. The size of the members increases according to loading, span and truss spacing. In some long-span applications, multi-ply trusses are used to increase capacity.


TRUSS PLATES

The truss connector plates are proprietary products. They are made of galvanized steel and manufactured by high speed stamping machines that punch out the plate teeth and shear the plate to the required size. Truss

plate manufacturers carry out a series of tests to determine the design properties for each type of plate.


Many sizes and gauges of connector plates are manufactured. The most common plates use 16, 18 or 20-gauge (US Standard Gauge) sheet steel, in widths of 25 mm to 250 mm and lengths up to 600 mm.

The stamping results in teeth with dimensions varying from 6 mm to 25 mm.

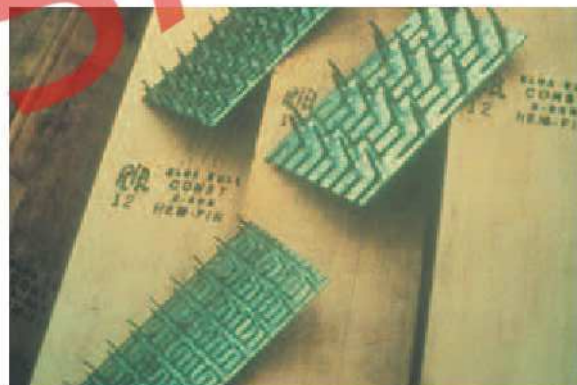

Truss Connector Plates

FIGURE 2: Sample of a Truss Shop Drawing

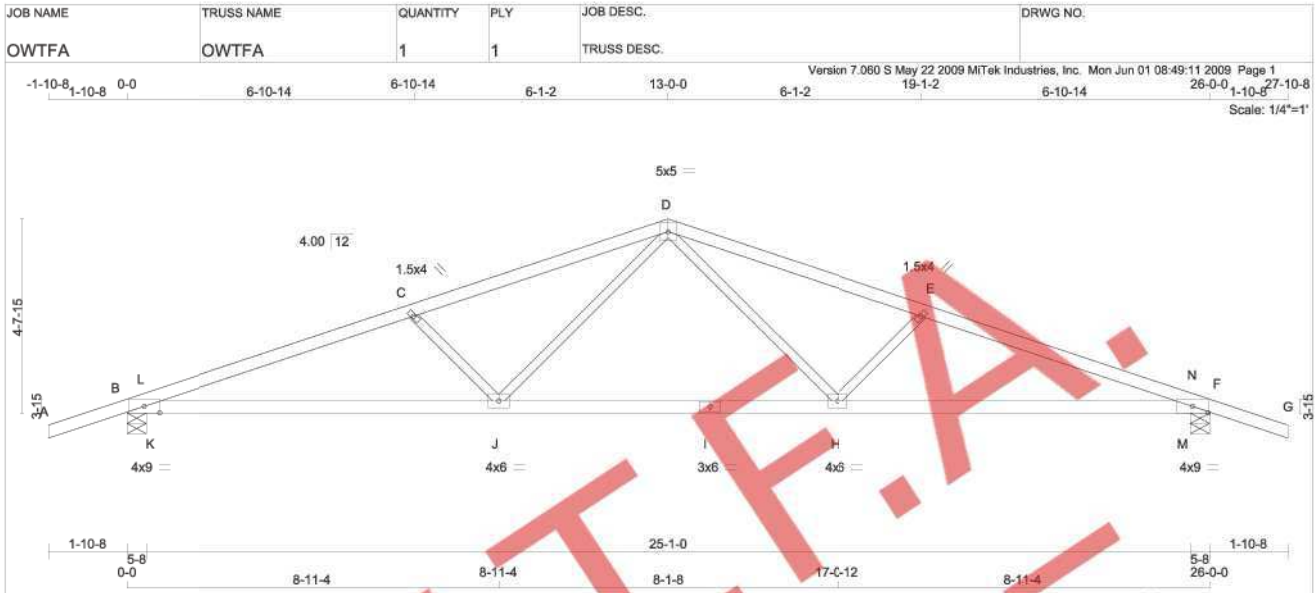

LUMBER
N. L. G. A. RULES

CHORDS	SIZE	DRY	No.2	DESCR.
A - D	2 X 4	DRY	No.2	SPF
D - G	2 X 4	DRY	No.2	SPF
B - I	2 X 4	DRY	No.2	SPF
I - F	2 X 4	DRY	No.2	SPF
ALL WEBS	2 X 3	DRY	No.2	SPF

DRY: SEASONED LUMBER.

PLATES (table is in inches)

JT	TYPE	PLATES	W	LEN	Y	X
B	TMB1-1	MT20	4.0	9.0	Edge	
C	TMW+w	MT20	1.5	4.0		
D	TTWW-p	MT20	5.0	5.0		
E	TMW+w	MT20	1.5	4.0		
F	TMB1-1	MT20	4.0	9.0	Edge	
H	BMW-1	MT20	4.0	6.0		
I	BS-1	MT20	3.0	6.0		
J	BMW-1	MT20	4.0	6.0		

Edge - INDICATES REFERENCE CORNER OF PLATE TOUCHES EDGE OF CHORD.

DIMENSIONS, SUPPORTS AND LOADINGS SPECIFIED BY FABRICATOR TO BE VERIFIED BY BUILDING DESIGNER

BEARINGS

JT	VERT	HORZ	MAXIMUM FACTORED GROSS REACTION DOWN	MAXIMUM FACTORED GROSS REACTION HORZ	INPUT BRG	REQRD BRG
B	1923	0	1923	0	5-8	2-1
F	1923	0	1923	0	5-8	2-1

UNFACTORED GROSS REACTIONS

JT	1ST CASE COMBINED	MAX. SNOW	MIN. LIVE	WIND	DEAD
B	1501	969 / 0	260 / 0	0 / 0	272 / 0
F	1501	969 / 0	260 / 0	0 / 0	272 / 0

BEARING MATERIAL TO BE OF THE SAME SPECIES AS CHORD MEMBER AND OF GRADE NO. 2 OR BETTER.

BRACING
TOP CHORD TO BE SHEATHED OR MAX. PURLIN SPACING = 2.72FT.
MAX. UNBRACED BOTTOM CHORD LENGTH = 10.00FT. OR RIGID CEILING DIRECTLY APPLIED.

LOADING
LOAD CASE (1) OF (3)

CHORDS					WEBS				
MEMB.	FR-TO	FACTORED FORCE (LBS)	FACTORED VERT. LOAD (PLF)	MAX. CSI (LC)	MAX. UNBRACED LENGTH	MEMB.	FR-TO	FACTORED FORCE (LBS)	MAX. CSI (LC)
A-B	31T	-104.9	-104.9	0.27 (1)	10.00	C-J	829C	0.17 (1)	
B-L	4209C	-104.9	-104.9	0.23 (2)	3.33	J-D	1198T	0.27 (1)	
L-C	4112C	-104.9	-104.9	0.84 (1)	2.72	D-H	1198T	0.27 (1)	
C-D	3576C	-104.9	-104.9	0.73 (1)	3.03	H-E	829C	0.17 (1)	
D-E	3576C	-104.9	-104.9	0.73 (1)	3.03	K-L	69C	0.00 (1)	
E-N	4112C	-104.9	-104.9	0.84 (1)	2.72	M-N	69C	0.00 (1)	
N-F	4209C	-104.9	-104.9	0.23 (2)	3.33				
F-G	31T	-104.9	-104.9	0.27 (1)	10.00				
B-K	3924T	-27.5	-27.5	0.76 (1)	10.00				
K-J	3924T	-27.5	-27.5	0.93 (1)	10.00				
J-I	2554T	-27.5	-27.5	0.67 (2)	10.00				
I-H	2554T	-27.5	-27.5	0.67 (2)	10.00				
H-M	3924T	-27.5	-27.5	0.93 (1)	10.00				
M-F	3924T	-27.5	-27.5	0.76 (1)	10.00				

DESIGN CRITERIA

SPECIFIED LOADS:
TOP CH. LL = 32.5 PSF
DL = 3.0 PSF
BOT CH. LL = 10.0 PSF
DL = 7.0 PSF
TOTAL LOAD = 52.5 PSF

SPACING = 24.0 IN. C/C
THIS TRUSS IS DESIGNED FOR RESIDENTIAL OR SMALL BUILDING REQUIREMENTS OF PART 9, NBCC 2005

THIS DESIGN COMPLIES WITH:
- PART 9 OF OBC 2006, BCBC 2006, ABC 2006
- CSA 086-01
- TPIC 2007

(55% OF 43.9 P.S.F. G.S.L. PLUS 8.4 P.S.F. RAIN LOAD EQUALS 32.5 P.S.F. SPECIFIED ROOF LIVE LOAD

ALLOWABLE DEFL. = L/360 (0.87")
CALCULATED VERT. DEFL.(TL) = L/559 (0.58")

CSI: TC=0.84 (C-L), BC=0.93 (J-K), WB=0.27 (D-J), SS=0.30 (C-L)

DOL LUMBER=1.00 NAIL=1.00 LS BEND=1.10
COMP=1.10 SHEAR=1.10 TENS= 1.10

COMPANION LIVE LOAD FACTOR = 0.50

TRUSS PLATE MANUFACTURER IS NOT RESPONSIBLE FOR QUALITY CONTROL IN THE TRUSS MANUFACTURING PLANT.

NAIL VALUES

PLATE	GRIP(DRY)	SHEAR (PSI)	SECTION (PLI)	MAX MIN	MAX MIN
MT20	618	354	1667	822	2284 1656

PLATE PLACEMENT TOL. = 0.250 inches

PLATE ROTATION TOL. = 5.0 Deg.

JSI GRIP= 0.85 (D) (INPUT = 0.90)
JSI METAL= 0.71 (I) (INPUT = 1.00)

TOTAL WEIGHT = 98 lb [M][F]

Truss Manufacture

The factory manufacture of light frame trusses is demonstrated in Figure 3. Since wood trusses are custom made, the variety of roof pitches and location of lumber members entails complex cutting patterns. Each member must fit snugly in place.

The computer design of trusses generates fabrication instructions. These indicate the size and grade as well as the precise cutting patterns for each of the chord and web members. The type, size, location and orientation of the connector plates are also indicated.

Once the pieces have been cut and arranged using a template, identical truss plates are placed on opposing faces at the joints and pressed into the lumber using hydraulic presses or rollers. When the pressing of the plates has been completed, the trusses are checked for plate tooth penetration and moved to a storage area.



Truss Handling, Installation and Storage

Trusses are strong in the vertical position but can be damaged at the plate joints if bent in the lateral direction. Trusses should be unloaded in bundles and stored on level ground, but never in direct contact with the ground. Trusses should always be protected from the elements. During unloading and erection, proper lifting equipment must be used to ensure safety and to prevent damage. Trusses less than 6 m can be installed by hand while trusses over 18 m use heavy rigging equipment.

Groups of trusses can be assembled on the ground and lifted together into position. This prevents lateral strain on the joints and resists wind loads prior to final installation of sheathing or permanent bracing.

Truss Bracing

Trusses must be braced to ensure safety and performance. To do so, trusses are placed according to installation procedures and guidelines provided by the truss fabricator. During construction, the installer provides temporary bracing to keep the trusses plumb and correctly spaced and to prevent damage or collapse caused by lateral loads such as wind. Permanent bracing is also

installed according to specifications provided by the truss designer or the building designer. Permanent bracing provides lateral support to compression web and chord members and prevents overall lateral displacement of the roof assembly.


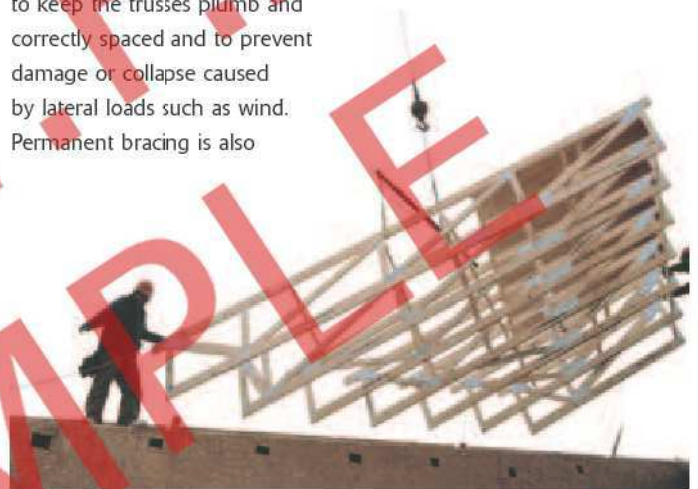


FIGURE 3: Manufacture of Light Frame Trusses

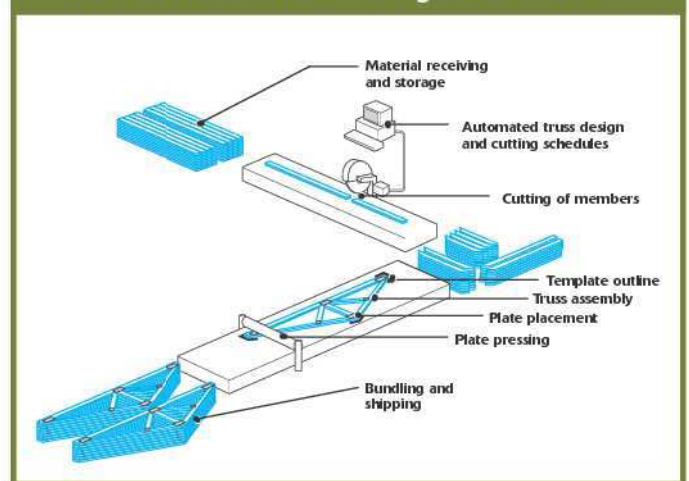

Wood Truss Advantages and Applications

Flexibility and Versatility

Long spans without intermediate supports create large open spaces that architects and designers can use with complete freedom. Partitions can be moved without compromising the structural integrity of the building.


1. Truss shapes have almost unlimited variety, thus allowing for distinctive roof shapes.
2. Many restaurant chains choose to expose their corporate identity in the roof design of their buildings.
3. Metal plate connected trusses are used to create arches of all types.
4. Wood trusses used in specialized applications such as agricultural and commercial buildings provide spans exceeding 25 m.
5. As a testament to their strength, wood trusses are used in concrete formwork, scaffolding and falsework for industrial projects.
6. The open web configuration of roof and floor trusses allows easy placement of plumbing, electrical, mechanical and sanitary services.


7. Vaulted ceilings are easily made: bottom chords of pitched trusses can be sloped, or parallel chord pitched trusses bearing on supports at different elevations can be used. Attic trusses are designed to provide living areas within the roof space.

8. Wood trusses are very versatile and compatible with other structural products. They can be connected to other trusses, or combined with other components, such as glulam and steel beams. In North America, wood roof trusses are commonly supported on concrete or masonry walls

using simply installed connections to join the roof to the walls.

9. Hinged connector plates used with mono-pitch trusses allow modular homes to be assembled with conventional roof pitches, greatly enhancing their appearance.

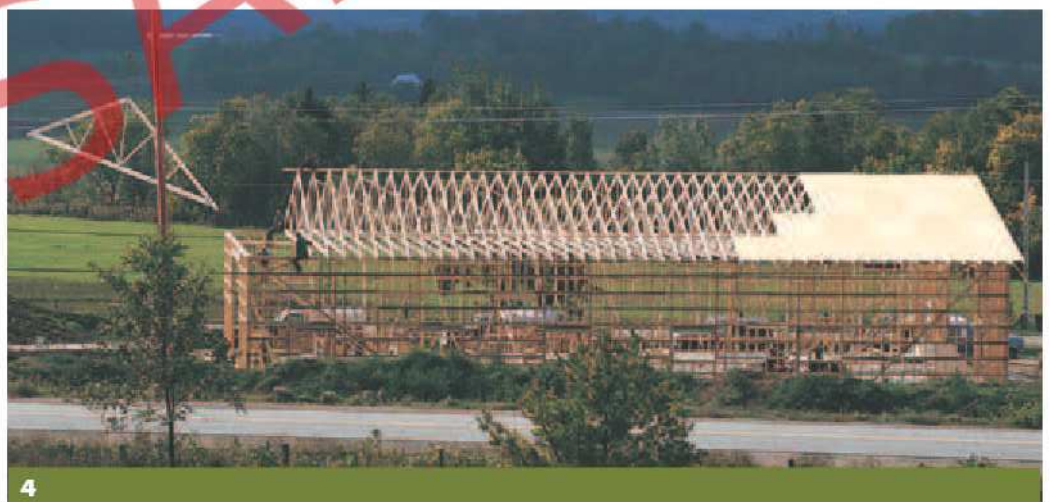

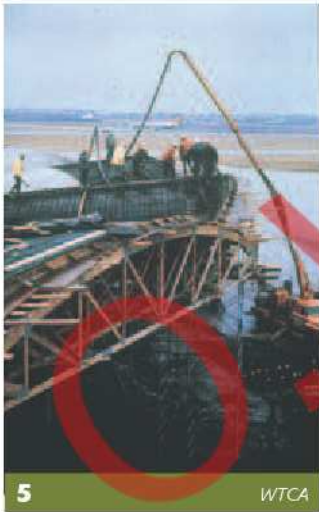

Performance

Since they were first introduced in the 1950's, metal plate connected wood trusses have demonstrated an excellent track record and are recognized in Building Codes throughout North America.

Roof Trusses

- Wood trusses eliminate on-site framing problems. Accurate fabrication and constant quality control assure trusses are uniform in size and shape and provide required structural integrity to a building.
- Wood trusses can be constructed and spaced to optimize lumber strength and conserve timber resources. For example smaller dimension lumber is used in the truss webs and the typical roof truss spacing of 600 mm on centre optimizes roof framing.
- When wood trusses are used as the principal framing members, constructing the roof or floor

system is simplified. Wood sheathing can be easily attached to the top chord to provide the underlay for the roofing membrane or floor finish. Ceilings can be readily connected to the truss bottom chords and insulation is easily installed in the truss cavity.

Floor Trusses


- Top chords of floor trusses provide a wide 89 mm surface for easier nailing and increased glue contact area with the sheathing material. This helps build a floor system that is stable and quiet for the life of the structure.

- Additional stiffness can be built into the floor truss and floor system to reduce floor vibration.

- Design requirements for fire safety in buildings are specified in the Building Codes. Fire-resistance ratings, based on standardized tests, are a measure of the fire resistance of roof and floor assemblies. Depending on sheathing, ceiling construction, and insulation, truss assemblies have achieved fire resistance ratings up to 2 hours.

Not all truss assemblies require a fire resistance rating. The building occupancy, the building size, number of exits and the use of sprinklers will determine what fire resistance rating is required.

- Floor truss assemblies can also be optimized to reduce sound transmission. In apartments, this limits noises from upper or lower units. For further information on fire and sound performance refer to "Fire Resistance and Sound Transmission in Wood-Frame Residential Buildings".

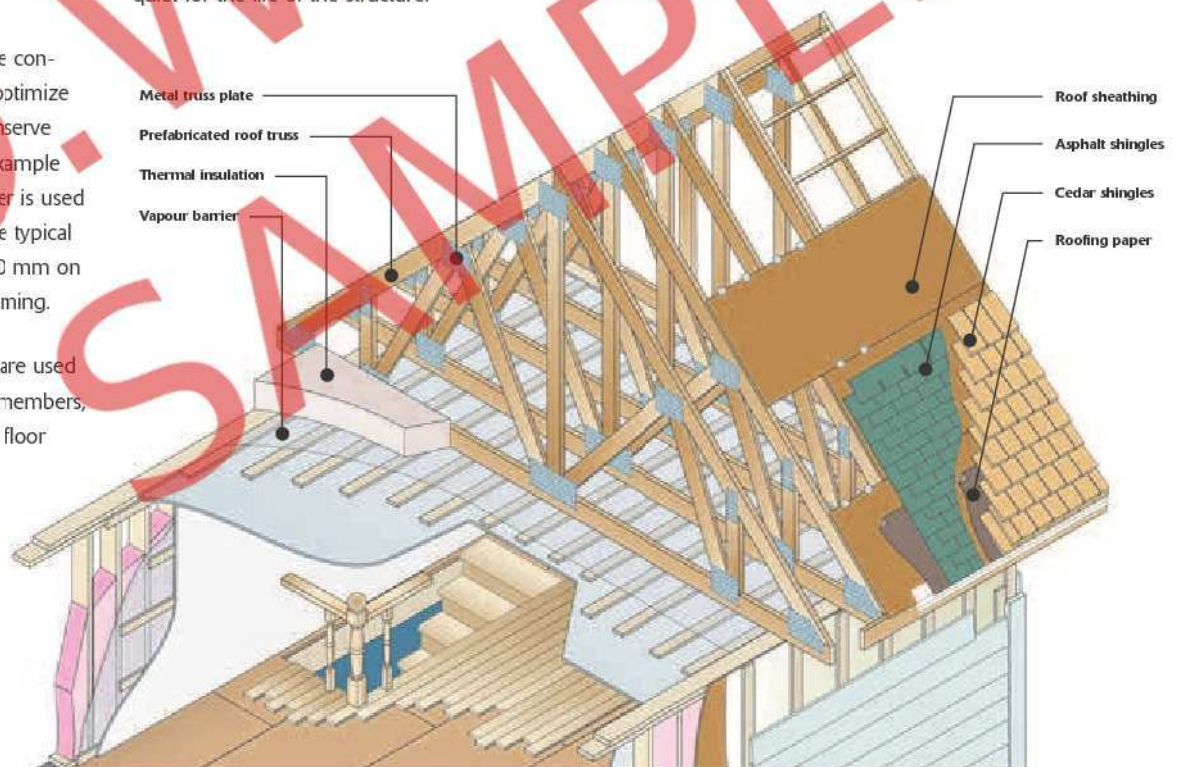

Source: Forintek Canada Corp. and Ministère des Ressources naturelles, de la Faune et des Parcs du Québec

Cost Effectiveness

Wood trusses are often more economical than steel or concrete in pitched or flat roof applications.

- Wood trusses arrive at the job site ready to install, reducing construction time significantly.

For example, framing a house with wood trusses is more than two times faster than with conventional wood framing. Trusses do not contribute to waste generated at the site and make cleanup less costly. Pilferage is also reduced because wood trusses generally cannot be used on other projects.



Environmental Benefits

All construction has an impact on the environment. We can minimize the environmental burden associated with construction by choosing building assemblies that minimize energy use and emissions.

- In most cases, wood trusses can be installed without the use of heavy machinery. They are light in weight and can be easily handled and lifted into place.
- Wood trusses can be installed by local tradesmen. They require less carpentry labour and, in typical applications, often eliminate the need for iron workers, welders, riggers and other costly trades.
- Truss fabricators and plate manufacturers can provide guidance and technical support to designers or builders confronted with design or installation difficulties. This support helps reduce the time invested in completing a construction project.
- Wood is the only renewable construction material. Framing with wood trusses minimizes the depletion of finite natural resources.
- Compared to other building materials, wood takes much less energy to process and minimizes air and water pollution.
- Wood trusses are energy efficient. They have excellent thermal properties, especially when compared with other framing materials such as steel. They create large cavities that are easy to insulate.



**ONTARIO WOOD TRUSS
FABRICATORS ASSOCIATION**

www.owtfa.com

**For more information
please contact our office at:**

Ontario Wood Truss Fabricators Association (OWTFA)

5 Glenaden Ave. E., Toronto,

Ontario M8Y 2L2 Canada

Tel: 416-235-0194

Fax: 416-239-4524

Email: mphillips@owtfa.com

Website: www.owtfa.com

O.W.T.F.A.
SAMPLE

Canadian
Wood
Council

Conseil
canadien
du bois



www.cwc.ca